


## OVERSHELF / HATCO WARMER INSTALLATION INSTRUCTIONS

The Overshelf and Hatco Model GRAH-18 Warmer have been thoroughly tested prior to shipment, and have been removed and packed separately to prevent damage during transit. After the fryer has been installed and tested at its operating location, install and test the Overshelf and Hatco warmer as follows:




### A. INSTALLATION

1. Remove the **Rear** panel from the work station by removing the six (6) #8 x 1/2" (13mm) drive screws.
2. **Carefully** unpack the Overshelf/Hatco warmer assembly; then position it on the Work Station Top Cap so the 1/8" (3mm) holes in the Top Cap and warmer assembly are aligned.
3. **Temporarily** install the assembly to the Top Cap using 10-24 x 1/2" (13mm) truss head screws, flat washers and lock washers (Provided) as seen in fig. 1. **DO NOT TIGHTEN**
4. Align the 1/8" (3mm) holes in the warmer pedestal with the holes in the front of the Top Cap; then **Secure** the warmer's 1" (25mm) pedestal tubing to the Top Cap using two (2) 10-24 x 1 1/2" (38mm) truss head screws, flat washers and lock washers (Provided) as shown in fig. 2.
5. Securely tighten the screws installed in step 3, connect the electrical cord to a 120 Volt receptacle and turn on the warmer to insure it operates.
6. Replace and Secure the rear panel on the Work Station using the six (6) screws removed in step 1.

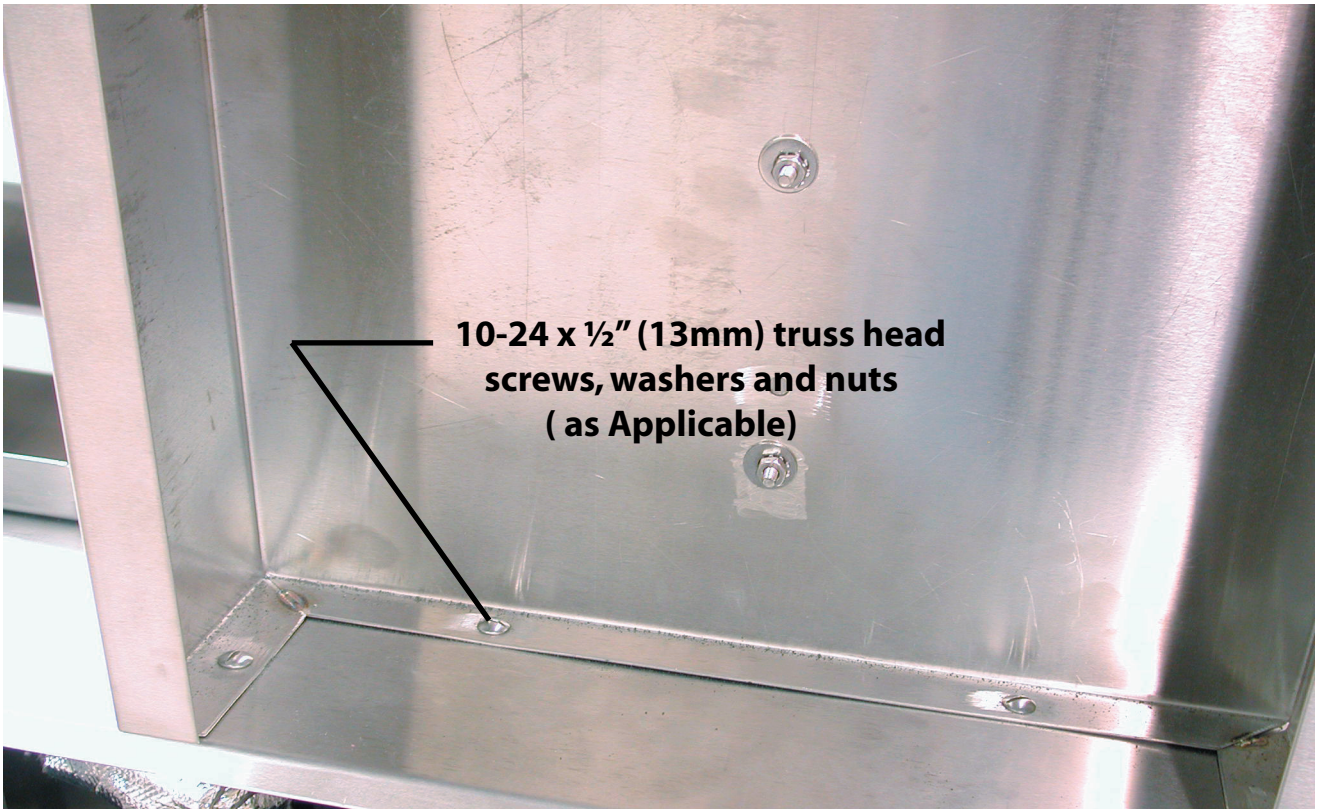

**10-24 x 1/2" (13mm) truss head screws, washers and nuts (as Applicable)**

**Figure 1**

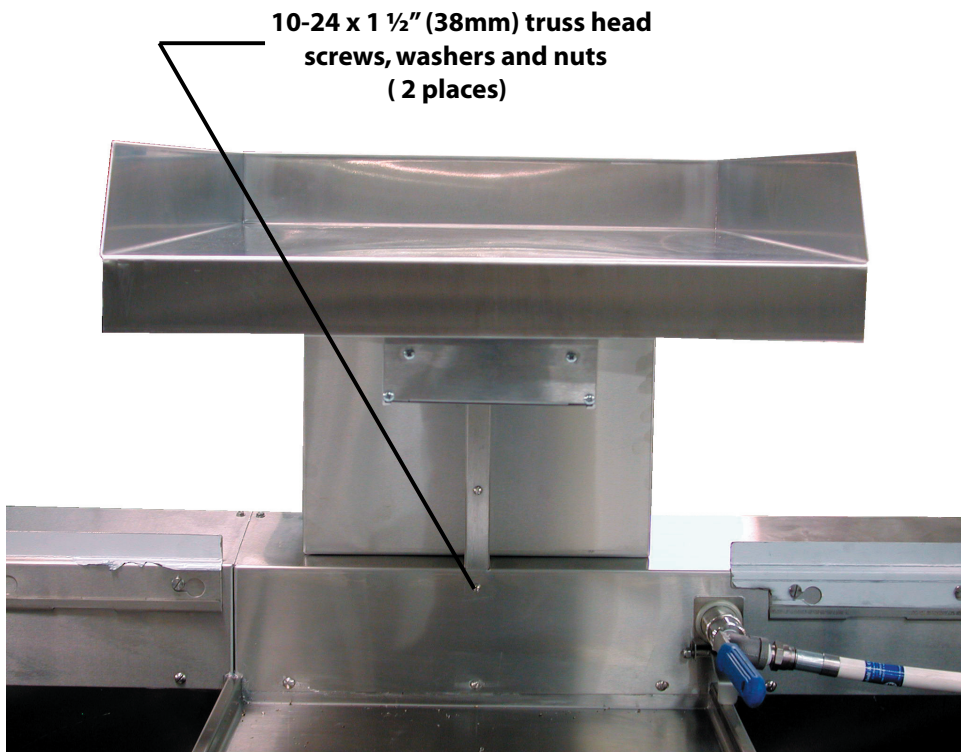

**10-24 x 1 1/2" (38mm) truss head screws, washers and nuts (2 places)**

**Figure 2**